
Drapery Instructions - Field Cutting Coiled Fabric

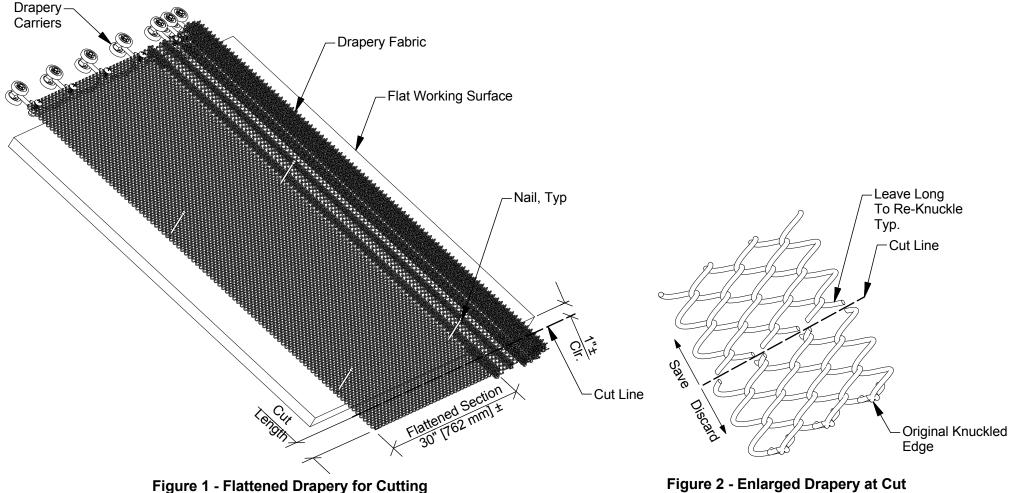

The Coiled Drapery requires removal from the track before cutting. Follow the steps below to properly trim the material to the desired length:

Step 1: Lay the Drapery horizontal and flatten a 30" [762 mm]± wide section as shown in Figure 1.

Step 2: Measure and mark the the Cut Length.

Step 3: Over hang the material beyond the Work Surface to allow 1" clearance for the Cut.

Step 4: Stretch the fabric and fix the corners to the Work Surface with Nails.

Step 5: Cut the individual Coils as shown in Figure 2. Note: Leave the Coil long on the "Save" side for Re-Knuckling.

Step 6: Knuckle the ends of each Coil by bending the "long" sides of adjacent Coils around each other.

Figure 2 - Enlarged Drapery at Cut